

Resetting shot clocks to factory defaults

New clocks are factory set. To set the Receiver Code for replacement transmitters (version 2.X):

- 1) Press and hold "PROGRAM MODE" button
- 2) Apply power by plugging in power supply
- 3) Release "PROGRAM MODE" button when "1" appears
 - A "0" will alternate while the clock is learning the transmitter code
- 4) Press and hold red button on the transmitter until "1" appears again
- 5) Release the button on the transmitter to complete the learn process

The clock is now ready to use.

Please Note: Each clock must be set separately.